



---

*Errata***1**

---

# Manual: 02253

---

## Manual Index: 0110

### *Table of Contents:*

1.	<i>Reference: Page 1 - 3, Chapter 1.4, Figure .....</i>	<i>1 - 3</i>
2.	<i>Reference: Page 3 - 3, Chapter 3.5, Table .....</i>	<i>1 - 3</i>
3.	<i>Reference: Page 3 - 4, Chapter 3.9, Table .....</i>	<i>1 - 4</i>
4.	<i>Reference: Page 3 - 4, Chapter 3.11, Table .....</i>	<i>1 - 4</i>



This page has been intentionally left blank.






## 1. Reference: Page 1 - 3, Chapter 1.4, Figure

The referenced information (figure indicating Board Overview – Component Side) is superseded by the following figure.

Component Side

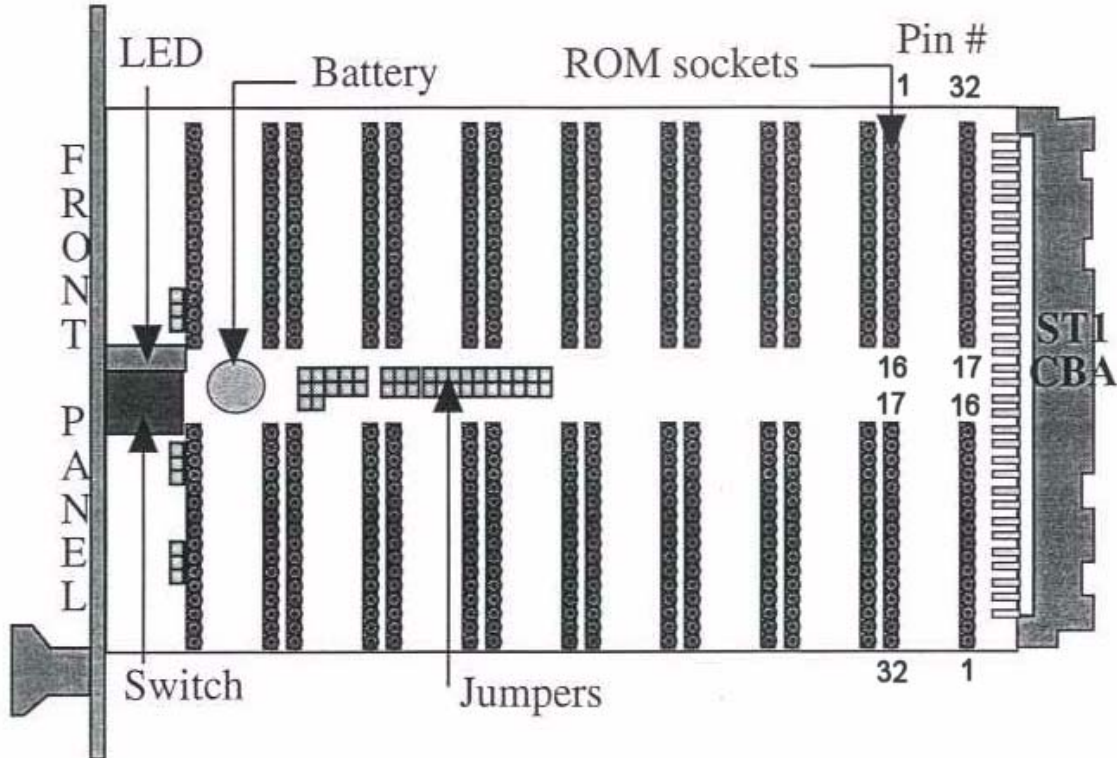

## 2. Reference: Page 3 - 3, Chapter 3.5, Table

The referenced information (table in section “Address Modifier Code”) is superseded by the following table.

B3	B4	AM CODE IN STANDARD VME ADDRESS SPACE
set	set	Standard supervisor program/data (3E, 3D)
set	open	Standard supervisor/user program/data (3E, 3D, 3A, 39)
open	set	User defined 1 (10 - 17)
open	open	User defined 2 (18 - 1F)



### 3. Reference: Page 3 - 4, Chapter 3.9, Table

The referenced information (table) is superseded by the following table.

B12	ACCESS TIME
set	100ns
open	150ns

### 3. Reference: Page 3 - 4, Chapter 3.11, Table

The referenced information (table) is superseded by the following table.

B15	ACCESS TIME
set	100ns
open	150ns

